
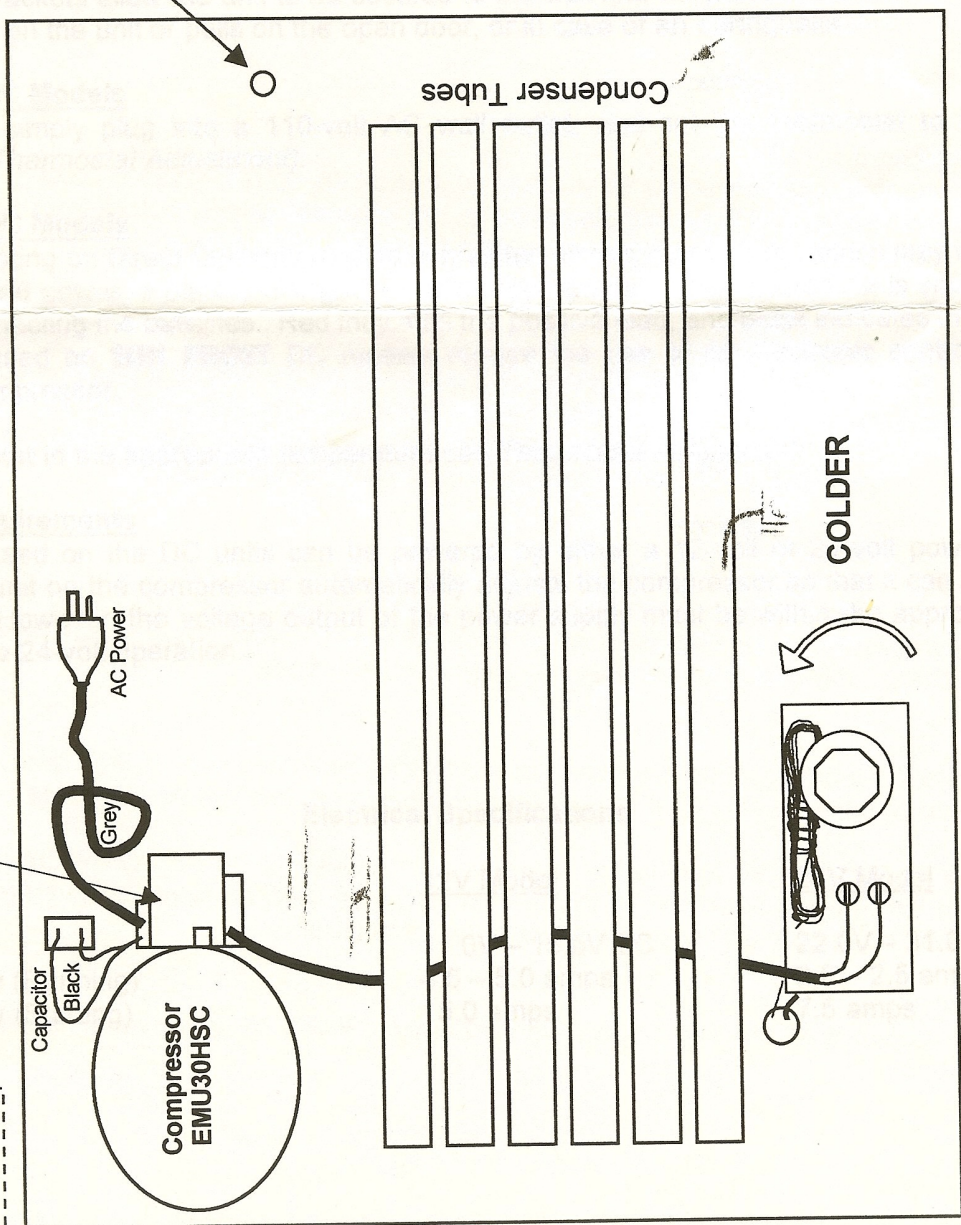


F 10 AC Wiring Diagram

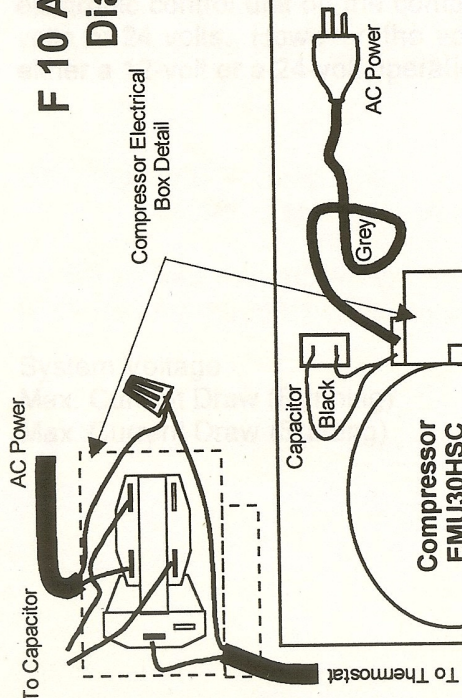

Thermostat with spare temperature sensor (wound white wire inside) for use with an electronic replacement thermostat

There is an installed tube leading from the top of the freezer to the freezer compartment. This tube can be used to install a backup sensor directly in the freezer compartment. This backup sensor would only be needed in the unlikely event that both the original mechanical thermostat and the spare sensor failed.

Same as F4 wiring?

SUN FROST OPERATING INSTRUCTIONS FOR THE F10

The F10 is located on top of the unit. Since heat is given off by the system, 3-4" of clearance is necessary for ventilation. For convenient access, we recommend the F10 on a cabinet approximately 34 inches (86 cm) x 39 inches (99 cm) high. This is according to individual preference.

There are two brackets located on top of the refrigerator, however, the top of the unit must be secured to the wall and not placed on the refrigerator top.